




**AMERICAN
ELECTRICAL, INC.**

INDUSTRIAL ELECTRICAL ACCESSORIES

TS3 CUT – DIN RAIL CUTTER

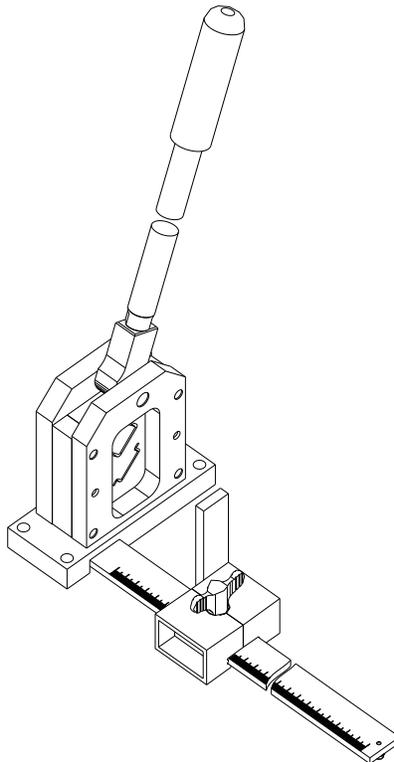

**TS3 CUT
OPERATING MANUAL**

**TS3 CUT
CONTENTS**

www.americanelectrical.com

SAFETY

BASIC INFORMATION1
SYMBOLS1
OPERATION OF MACHINE & POSSIBLE DANGERS1
DESIGNATED USE2
DANGERS2
PLACES FOR USE2
SAFETY DEVICES2
AUTHORIZED USER2
WARRANTY2

ASSEMBLY

APPLICATION3

OPERATION

CUTTING4

MAINTENANCE

LUBRICATION5

TABLE MOUNT

TEMPLATE6

SPARE PARTS7

CONTACT INFORMATION.....8

TS3 CUT SAFETY

Basic Information

The basic condition for safe use and proper operation of the TS3 CUT is knowledge and attention to the safety details.

Important for Your Safety

The following safety information must be observed by all people who will work with the TS3CUT.

All rules and instructions in the work place must be observed.

Symbols

This operating manual contains the following symbols:



Marks a special safety note.



Marks a special operating note.

Operation of Machine & Possible Danger

The TS3 CUT complies with relevant safety standards and was subjected to a security check.

The TS3 CUT must be used only:

- For cutting DIN Rail sizes 15 x 5.5mm, 35 x 7.5mm, and 35 x 15 x 1.5mm
- In safe proper working condition

All persons commissioning, operating and maintaining the TS3 CUT must be:

- Appropriately qualified
- Consult this manual for its correct use

TS3 CUT SAFETY

Designated Use

Use the TS3 CUT only for cutting of DIN Rail sizes 15 x 5.5mm, 35 x 7.5mm, and 35 x 15 x 1.5mm.

Never insert solid metal parts or similar objects. This will damage the die set.

Third party reconstruction and changes of the TS3 CUT beyond retooling are not allowed due to safety violations!

Authorized User

Only authorized and instructed users are allowed to work with the TS3 CUT.

The user has a responsibility to all people operating the TS3 CUT.

We ask our customers to:

- Make the operating manual accessible to the user
- Assure that the user has read and understood the manual

Warranty

In general, our common terms of sale and delivery are valid.


Warranty is void if any of the following situations occur:

- Improper usage of the TS3 CUT
- Improper places for use
- Inappropriate use and use beyond those described in the operating manual
- Any reconstruction of the TS3 CUT
- Continued use of the TS3 CUT when faults are recognized
- Unauthorized repairs

! Only use original spare parts.


**TS3 CUT
ASSEMBLY**

Assembly of the measurement rail and lever bar

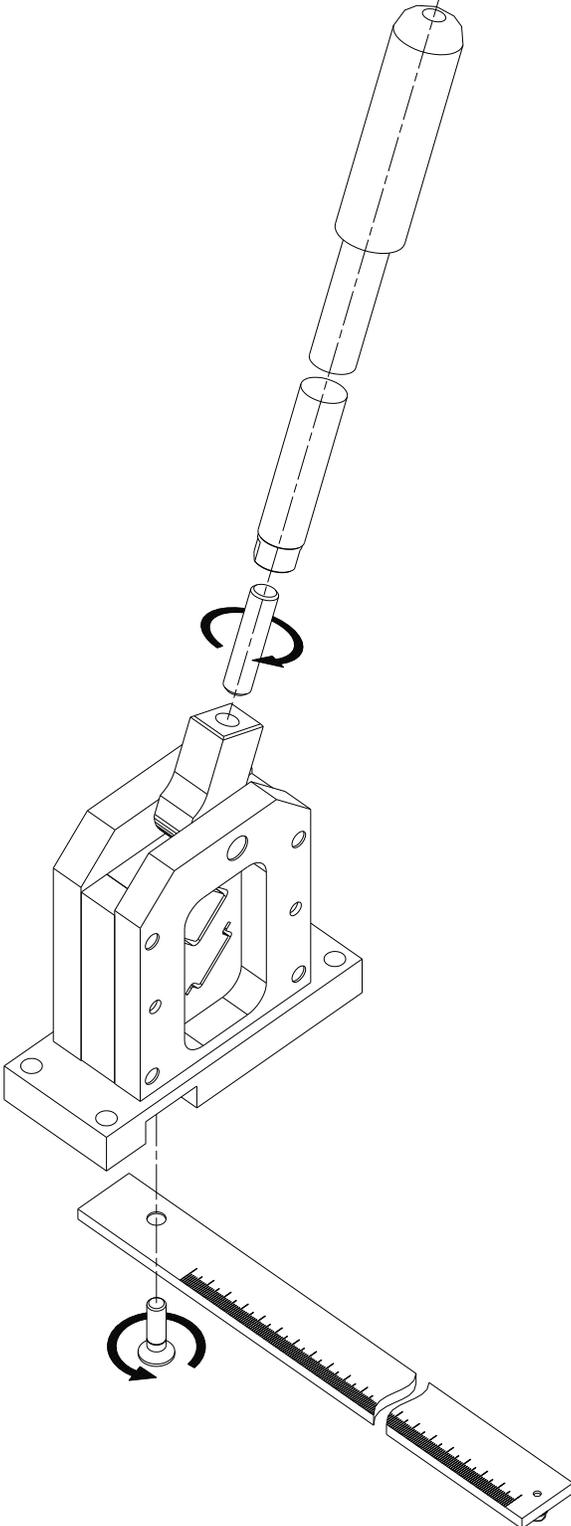


**TS3 CUT
OPERATION**

CUTTING

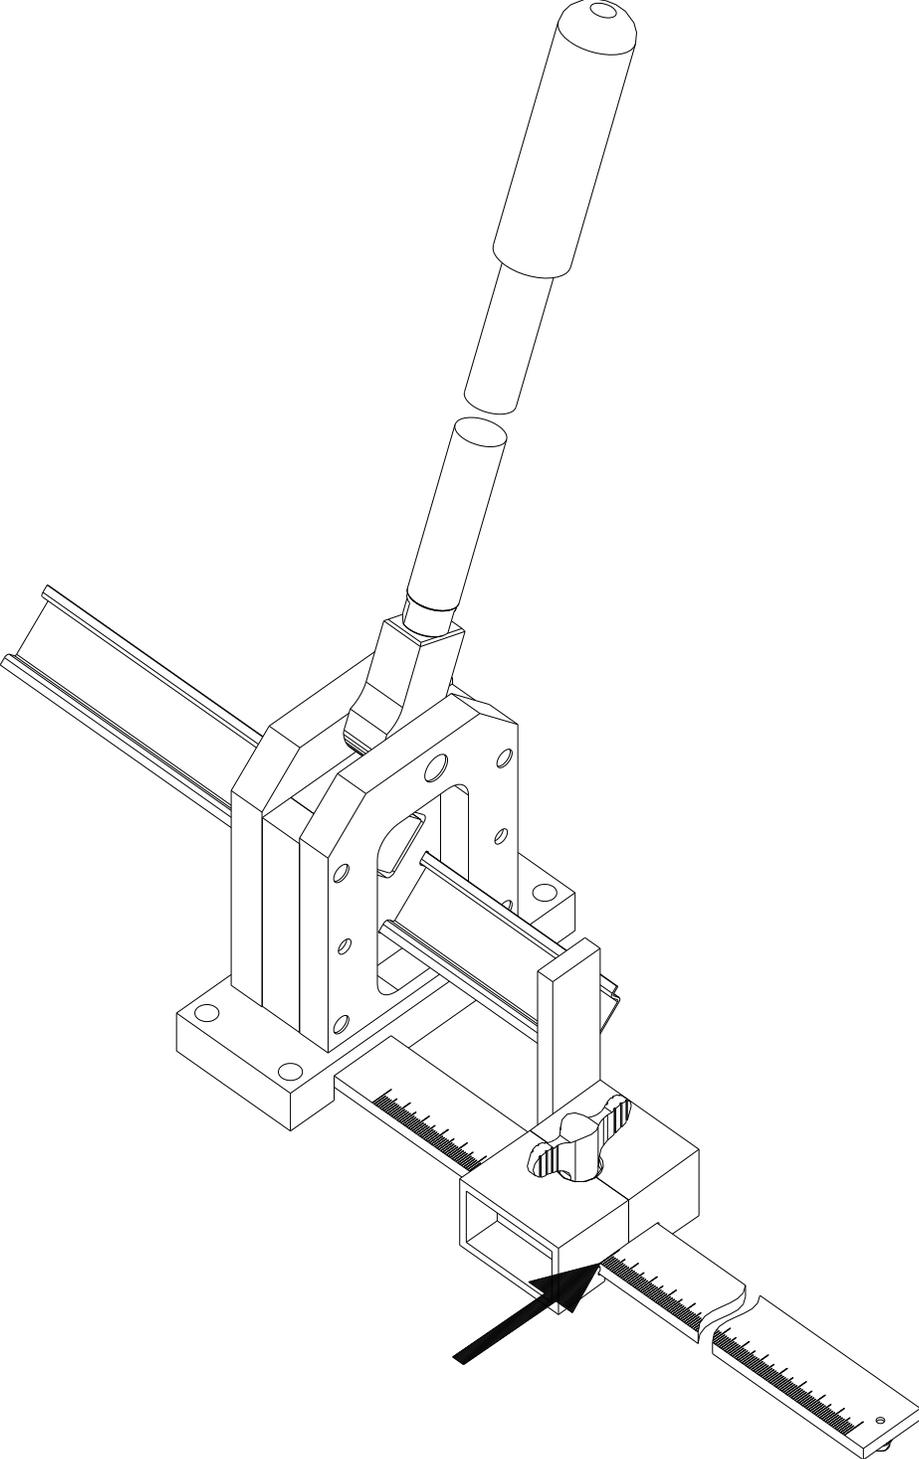


**TS3 CUT
MAINTENANCE**

LUBRICATION POINTS

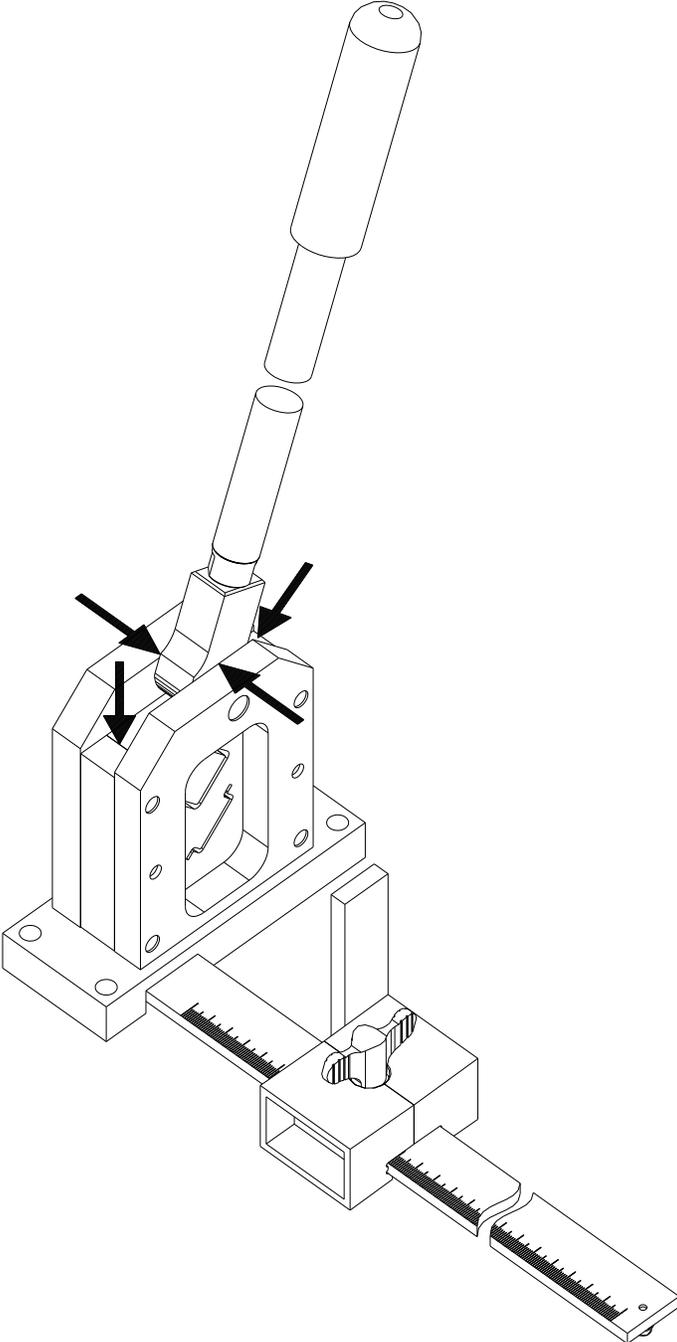


**TS3 CUT
TABLE MOUNTING**

**TEMPLATE FOR TABLE
ASSEMBLY AND MOUNTING**

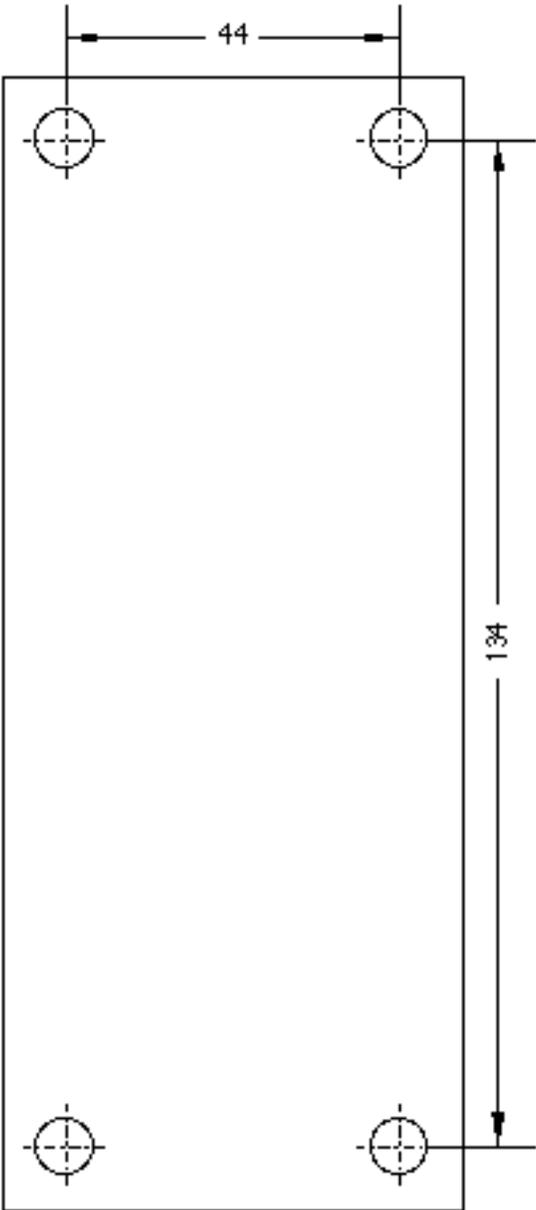

TS3 CUT SPARE PARTS

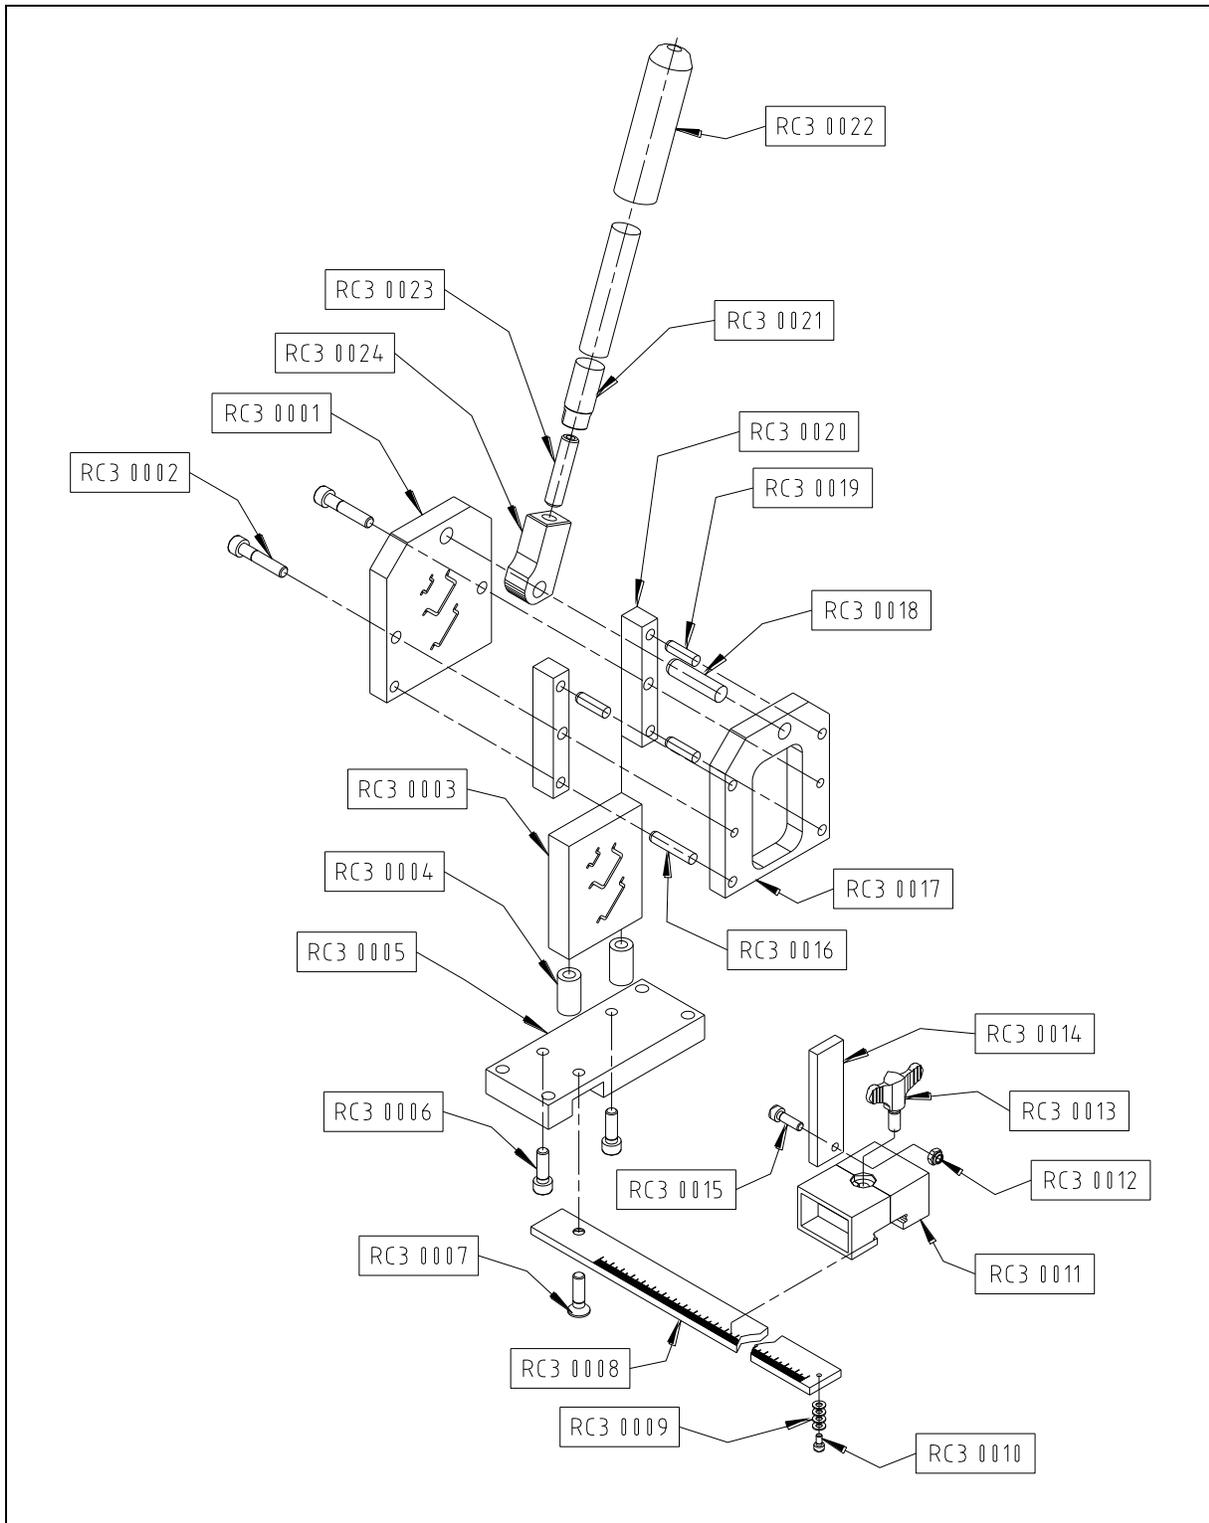

AMERICAN ELECTRICAL, INC.
456 SOUTHLAKE BLVD.
RICHMOND, VA 23236

WWW.AMERICANELECTRICAL.COM

TELEPHONE: (804) 379-2899
FAX: (804) 379-8935

THE COPYRIGHT FOR THIS INSTRUCTION FOR USE BY AMERICAN ELECTRICAL,
INC.

NO PART OF THIS INSTRUCTION FOR USE MAY BE REPRODUCED, COPIED, OR
TRANSLATED WITHOUT PERMISSION.

© 2004 AMERICAN ELECTRICAL, INC.
RICHMOND, VA
USA